 


INSTRUCTION MANUAL

3-IN-1 SWIVEL LIGHTWEIGHT CORDED VACUUM CLEANER MODEL: CS-300

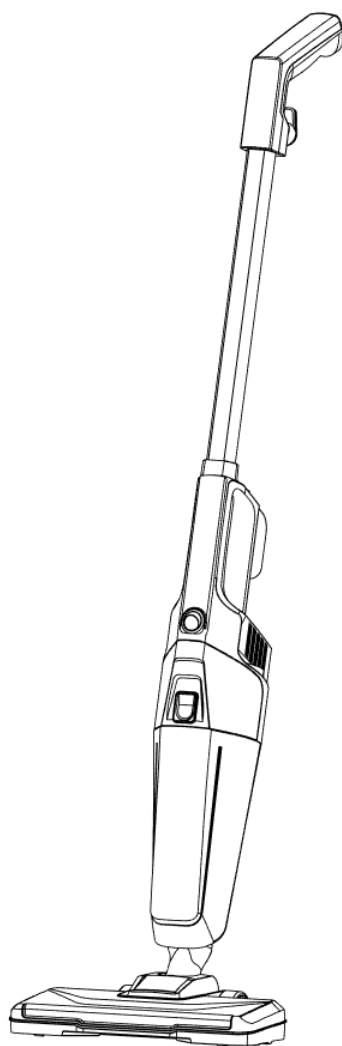

Please read before product use.
Save this manual for future reference. Made in China.



IMPORTANT SAFETY INSTRUCTIONS

For your safety, please read and understand this manual.

This contains information that relates to protecting you, and preventing potential problems.

When using an electrical appliance, basic precautions should always be followed, including but not limited to the following:

- Not intended for use by children or persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless been given supervision or instruction by a person responsible for their safety.
- Not intended for use on liquid or hot, flammable objects.
- Not intended for use on toxic materials (i.e. ammonia, bleach, etc.)
- Do not operate with wet hands.
- Do not operate if the cord is damaged.

Safety Directions


Please read this instruction manual carefully before first use. It is highly recommended to keep this instruction manual for future reference. It includes, but is not limited to, the following:

- **DO NOT** use the vacuum cleaner if it is blocked, or filterless. Ensure that the filters are clean or replaced before use.
- **DO NOT** use the vacuum cleaner if the vacuum cleaner malfunctions, sounds abnormal, smokes, is damaged, etc. during operation.
- **DO NOT** use the vacuum cleaner on hard, large, or sharp objects, as it can likely cause damage.
- **DO NOT** put objects into the opening.
- **DO NOT** leave the vacuum cleaner unattended while in use.
- **DO NOT** misuse the cord. In order to protect the cord, always pull the plug instead of the cord.
- **DO NOT** operate the appliance with a damaged cord or plug.



- **DO NOT** attempt to modify this product in any way.
- **DO NOT** store the vacuum cleaner near high temperature areas.

In addition to this, we recommend a few directions for when using the product. This includes, but is not limited to, the following:


- This product is for domestic use **ONLY**. Industrial or commercial use invalidates the warranty.
- Keep your work area well lit.
- Use intended only on dry, indoor surfaces.
- Keep a close eye on children and pets while in use.
- Turn off all the controls before unplugging the vacuum cleaner.
- Keep the vacuum cleaner from running over cords.
- Take extra care when using the vacuum cleaner on the stairs.
- Please clean the filter after use.

Correct Disposal of this product	
	<p>This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems of contact the retailer where the product was purchased. They can take this product for environmental safe recycling.</p>

Vacuum Cleaner Components

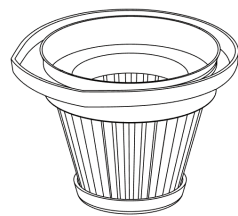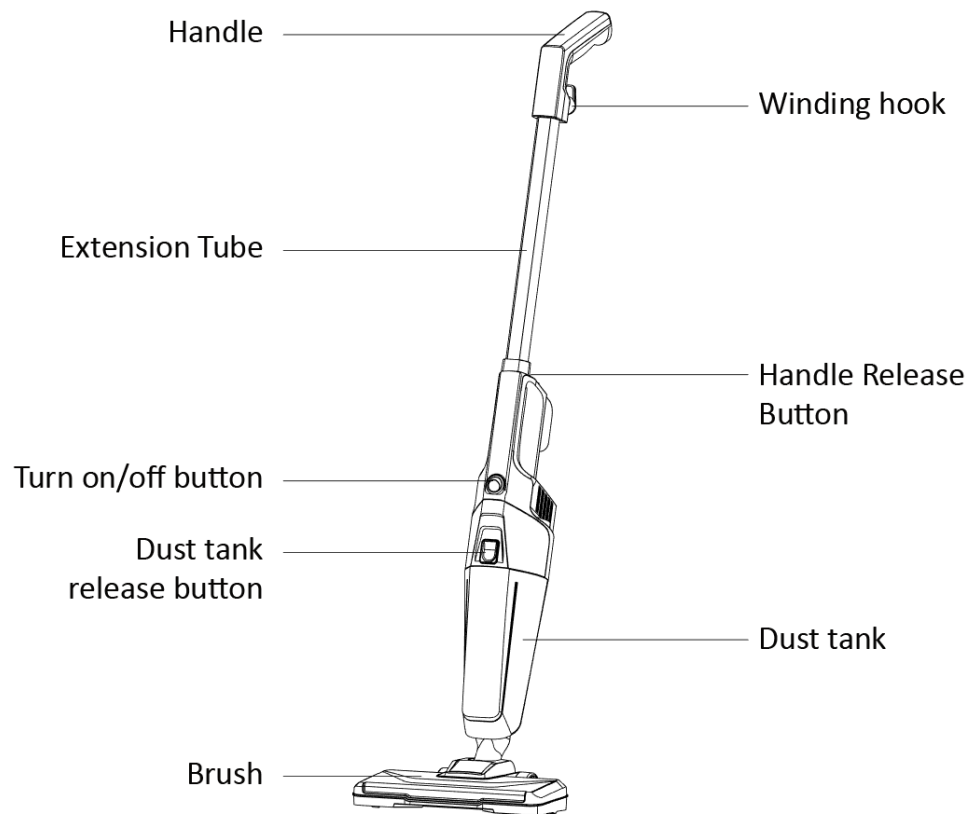


Dust Cup

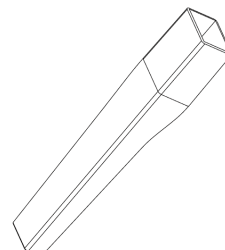

Crevice tool


INSTALLATION AND USE

 How to assemble :

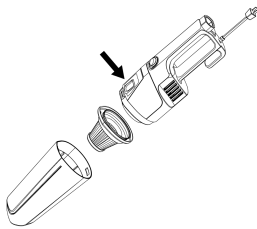


Check on filter

 - Check and make sure that the filter is in place. You can open up the dust tank with the release button.

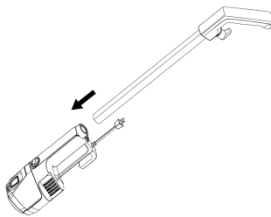


Install the Handle

- The handle is installed by inserting the metal shaft into the opening at the top. A clicking sound should indicate that the tube is secured to the main body.

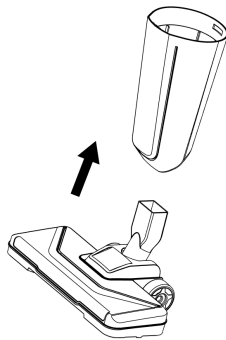

Install Brush Head

- Insert the brush head into the suction inlet portion of the dust tank.

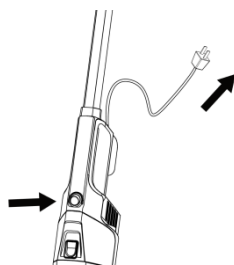

Turn on


- Plug in the power cord, and turn on the vacuum cleaner.



Storage


- Unplug the power, make sure the power switch is **OFF**. Wrap the power cord around the two cord hooks, and place it in for convenient storage.

You can also use the vacuum cleaner by hand. In order to do so, just follow the steps below.

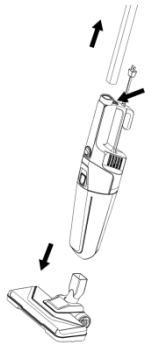


Disassembling the Vacuum

- Remove the metal handle by pressing down on the release button located at the top of the back of the vacuum cleaner.

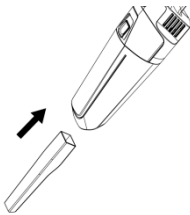

Replace Brush with Crevice Tool

- Remove the brush head, and insert the crevice tool instead.

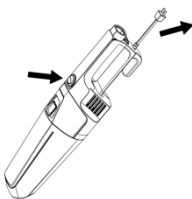


Power On

- Insert the plug into the socket, and turn on the vacuum cleaner.

Caution: The suction hole opening must be open and free of any obstructions at all times. Otherwise, the motor will overheat and could become damaged.

Cleaning & Changing Filters

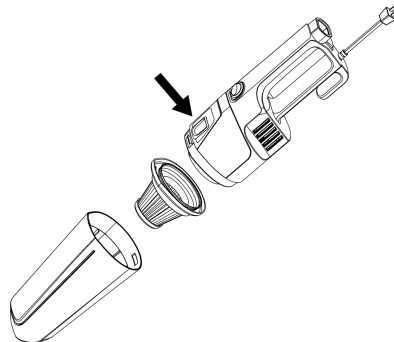

Cleaning and changing the filter will improve the performance of the vacuum cleaner. In order to do so, please refer to the following steps:

- Press down on the release button for the dust tank.
- Pull out the dust cup filter, and carefully dispose of the dust.
- Wash the dust cup filter, then let it air dry.
- Once it is fully dry, replace the filter back into the dust tank.

Please do not use a washing machine to clean the dust filter, or a hair dryer to dry the filter. We recommend that the filter be replaced every 3 months depending on frequency of usage to ensure that the vacuum cleaner is at peak performance.

Troubleshooting

Before continuing with maintenance of troubleshooting, please turn OFF the power and disconnect the plug from the electrical outlet.

The Vacuum Cleaner is not running:

1. Check that the power button is turned ON.
2. Ensure that the plug is firmly plugged in.
3. Check that the power outlet is not damaged.
4. Check the fuse.

Vacuum Cleaner is not running efficiently:

1. Check the filter to ensure that it is not wet, clogged, or full
2. Check that the brush head is secured tightly.

PRODUCT SPECIFICATIONS

Model No.	CS-300		
Voltage	120 V	Frequency	60 Hz
Power	600 W	Noise level	≤76 dB
Product N.W.	3.5 lbs	Dust Cup Capacity	0.6 L
Suction	18 kPa		

Warranty

This vacuum cleaner has been warranted to be free of defects in material and workmanship for a period of 1-year from the date of original purchase when used in accordance with the operating and maintenance instructions and under normal household usage. This warranty is granted only to the original purchaser, and is applicable only to original purchases.

We will repair or replace a defective vacuum or part that is covered by this warranty. Repairs will be performed using new or refurbished parts that meet or exceed our specifications for new parts. If we replace the vacuum, the replacement may be a reconditioned unit. Depending on availability, we reserve the right to provide you with a replacement product that is the same or similar to the original product.

The warranty does not cover normal wear and tear of the vacuum and vacuum accessories that require replacements such as dust bags, filters, bristles, and cleaning.

This warranty is only valid if the appliance has been used in accordance with the instructions of the manual, and provided that it has not been modified, repaired, or interfered with by an unauthorized party, or damaged from misuse.

In order to obtain warranty service, you must contact our support team to discuss warranty claims and procedures. All warranty claims must include proof of purchase, which may include date of purchase, purchaser's name, and anything that will help identify the legitimacy of the purchase.

We will not be responsible for the initial shipping and insurance charges if the defective product must be shipped for warranty service or evaluation. However, we will pay return shipping if the repairs are covered by the 1-year warranty. Please provide the model, type, and serial number when returning the vacuum.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no circumstance shall the manufacturer be liable for any consequential or incidental damage you may incur in connection with your purchase or use of the vacuum. Some states do not allow for the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.